


# TRACE WIRES ON NON-METALLIC WATER SERVICES (MAIN TO METER)

In February 2006 Coliban Water introduced a requirement to fit a trace wire to all non-metallic water services between the water main and the water meter.

The following requirements are to be observed when installing the trace wire:

1. The trace wire is to be taped to the service pipe at intervals not exceeding 1 metre.
2. The trace wire shall be of a continuous length.
3. The trace wire shall start at the ferrule bend and finish at the meter stop.

Coliban Water will periodically carry out inspections to ensure the above requirements are being met.

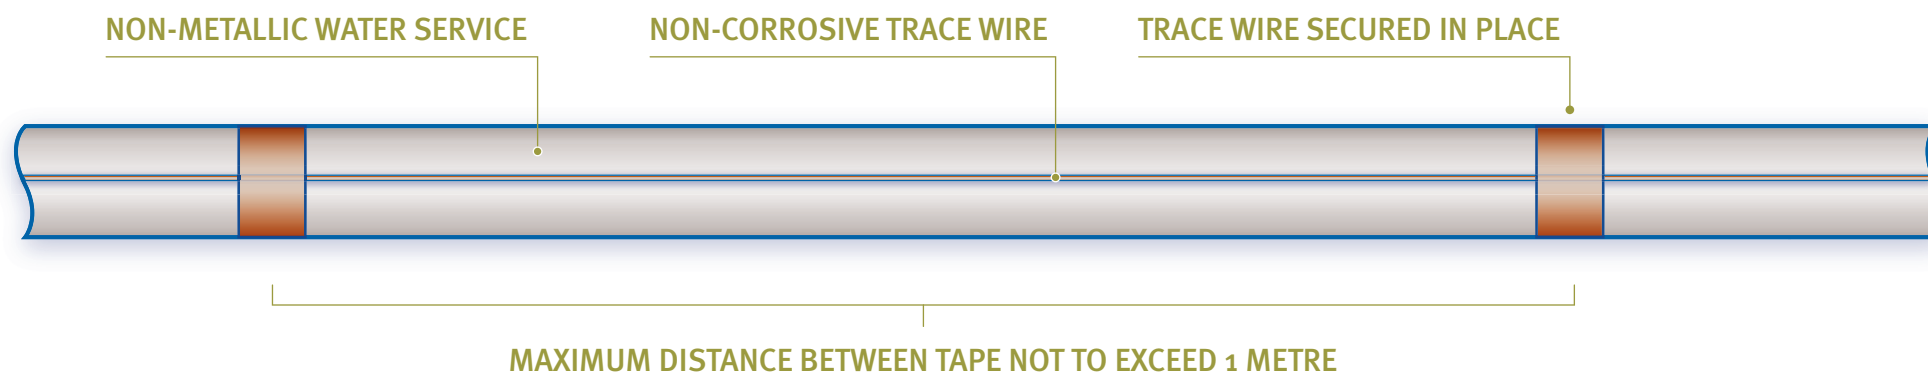

Disclaimer: This information is provided as a guide to the requirements for installing trace wires. Coliban Water reserves the right to alter or change information. 280408